



QUICK START GUIDE · BARIX S400

Let's set up your Tonada box

Three cables and about five minutes. Follow the steps in order: audio, network, then power.

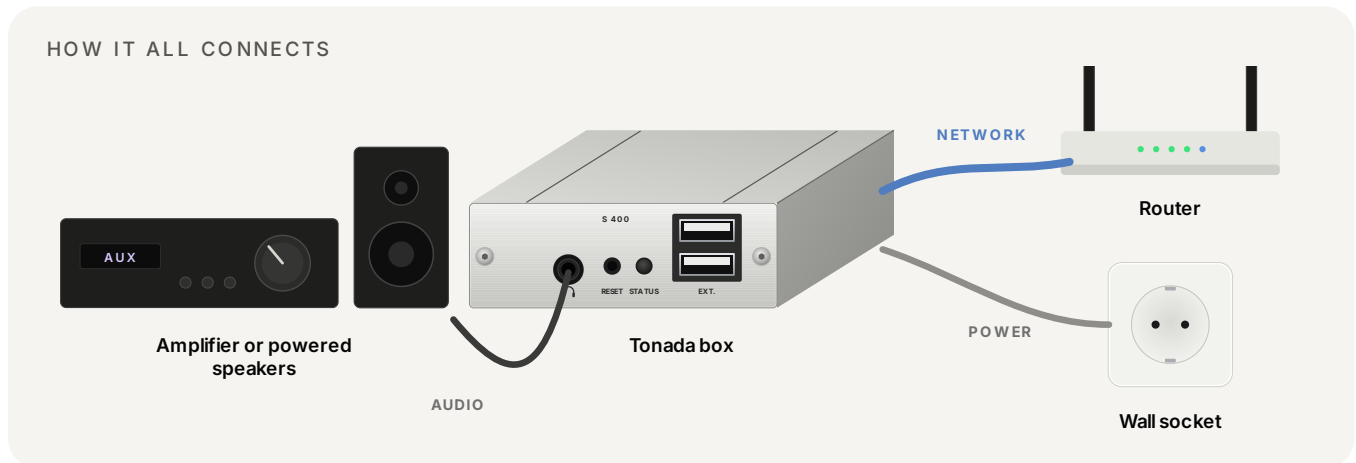


IN THE BOX

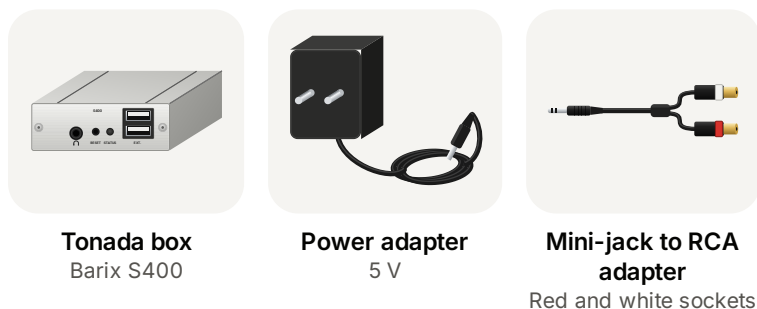


YOU'LL ALSO NEED

NOT INCLUDED

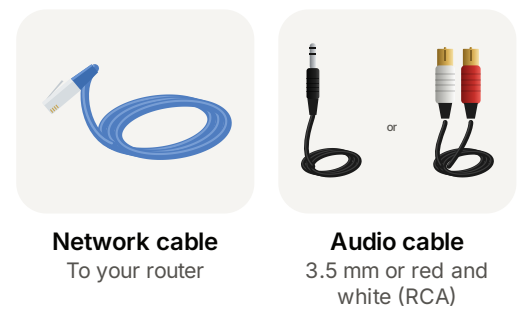


GET TO KNOW YOUR BOX

The front

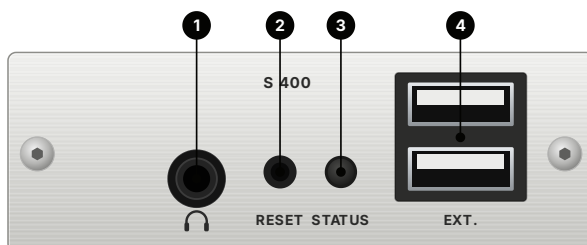

- 1 Audio out** · Headphone symbol
- 2 Reset** · Don't press
- 3 Status light** · Shows what the box is doing
- 4 USB** · Not used

The back

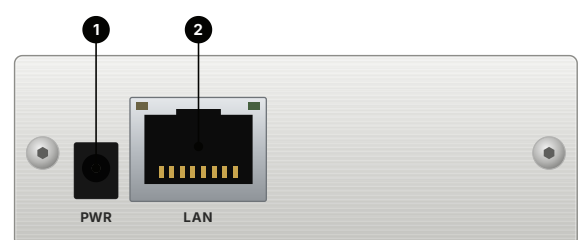

- 1 Power** · PWR
- 2 Network** · LAN

1 STEP 1 OF 3 Connect the audio

Check which plug your audio cable has, then follow A or B.

A 3.5 mm plug



Plug it straight into the headphone socket on the front.

B Red and white plugs



Plug the adapter into the headphone socket on the front, then connect your cable: red to red, white to white.

or

A

B

THEN, FOR BOTH




Plug the other end into your amplifier or powered speakers.

! Use an input marked AUX, LINE IN or CD – not PHONO.

2


STEP 2 OF 3

Connect the network

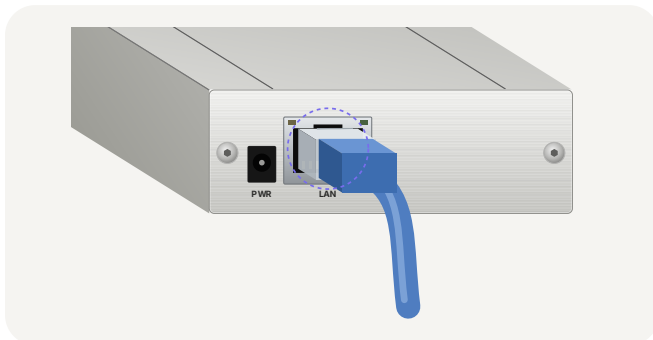

2a

Plug a network cable into the LAN port on the back.

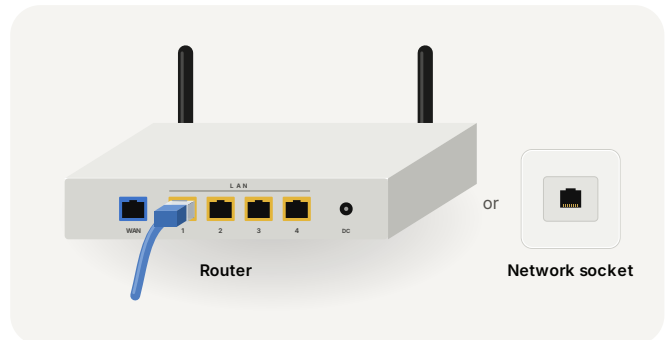


2b

Connect the other end to your router or a network wall socket. The box needs a wired connection.

3

STEP 3 OF 3

Connect the power

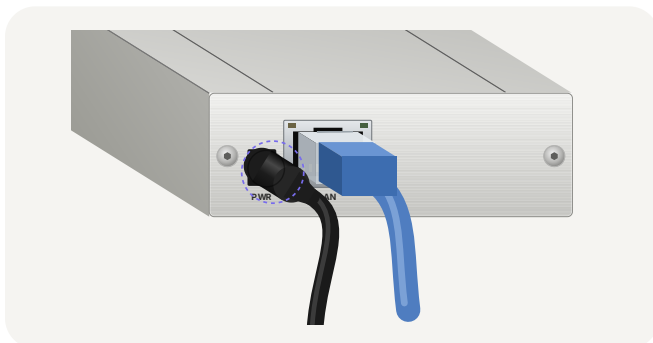

3a

Plug the power adapter into PWR on the back...



3b

...then into a wall socket.

! Always connect the power last.

STARTING UP

Watch the status light

The box is starting up. This usually takes a minute or two.



Blinking red
Starting up



Blinking green
Connecting



Steady green
Connected

🔊 You may hear a voice reading out numbers. That's normal.



Steady green means you're all set.

Your Tonada music starts playing. Set the volume on your amplifier.

GOOD TO KNOW

What the status light means

	Steady green	All good. Connected and playing.
	Blinking green	Connecting. Still blinking after 10 minutes? Check the network cable.
	Blinking red	Starting up. Give it a moment.
	Blinking orange	Updating. Please don't unplug it.
	Steady red	Something's wrong. Unplug the power for 30 seconds, then plug it back in.
	Off	No power. Check the power adapter and the wall socket.

TROUBLESHOOTING

Quick fixes

 Steady green, but no sound? Check that the amplifier is on, set to the right input (AUX or LINE) and turned up.	 Still blinking green after 10 minutes? Check both ends of the network cable and that your internet works. Try another port on the router.	 Please don't press Reset. Holding it down erases the box's settings.
--	--	---

Need a hand? We're happy to help.

hello@tonada.com

For IT teams: The box needs a wired network connection with automatic IP addressing (DHCP) and outbound internet access (HTTP/HTTPS, DNS and NTP). Full list of hosts and ports: help.barix.com → RetailPlayer Network Requirements.